



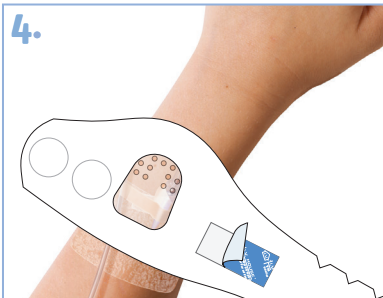

**I.V. HOUSE®**  
Protection Over and Above®

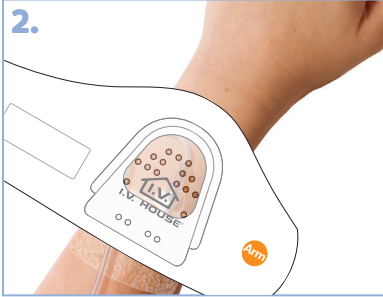

## Pediatric Arm Directions

Insert the IV catheter and securely attach an IV extension set or IV tubing. Secure IV site with transparent dressing, tape, or adhesive anchor. Loop the IV tubing away from the catheter hub and toward the IV fluid source. Make sure the loop of tubing or extension set is small enough to fit entirely under the inner curve of the domed end of the I.V. House UltraDressing.

(Step-by-step directions for IV site taping are also available at [www.ivhouse.com](http://www.ivhouse.com))

Position the I.V. House UltraDressing over the looped tubing and catheter hub. To determine appropriate fit, wrap the long end of the fabric comfortably around the arm overlapping the orange label to determine how much fabric to cut off.

Cut off excess fabric at the appropriate notch. Be sure to leave 2 Velcro® loop coins for the closure on the long end of the fabric. Always cut off extra fabric.

Any extra fabric under the dome would decrease the visibility of the site and is not recommended.

Turn the device over and remove the blue release paper from the strip of soft cloth surgical tape. The purpose of this gentle tape is to keep the device from sliding down the patient's arm.



Place the I.V. House UltraDressing over the IV site. Apply the fabric around the arm, gently pressing the tape into place. Close the device with the Velcro® hooks and loops. Always allow enough stretch for two fingers to fit comfortably under the fabric.

Inspect the IV site according to nursing practice guidelines: release the closure tab under the label and lift the dome to visualize the entire IV site. After viewing the entire IV site, re-close the device.

## I.V. House UltraDressing® Intravenous Site Protectors



LATEX FREE

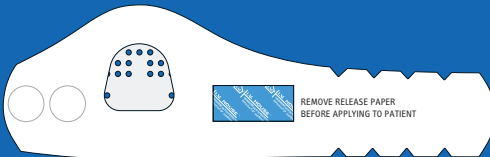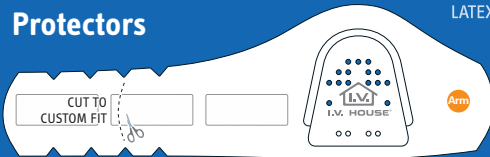


### Item 730Arm

#### Pediatric and Adult Patients:

- Wrist, Forearm, Antecubital Space or Upper Arm

#### Neonates and Infants:

- Hand, Wrist, Forearm, Antecubital Space or Upper Arm
- Foot and Saphenous Placement

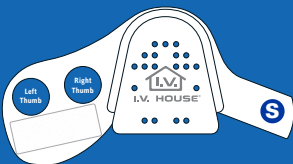

### Items 730S, 730M and 730L

- Designed To Fit Either Hand

www.ivhouse.com  
800.530.0400



800-530-0400

IVinfo@ivhouse.com

Learn More: visit our website: [www.ivhouse.com](http://www.ivhouse.com)

Instructive Videos / Usages / Directions / Product Details and Ordering Information





**I.V. HOUSE**  
Protection Over and Above



**I.V. House UltraDressing®**  
Intravenous Site  
Protectors



LATEX FREE

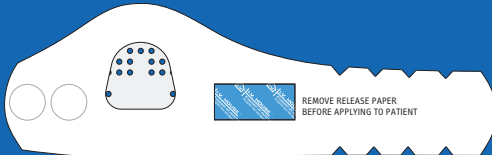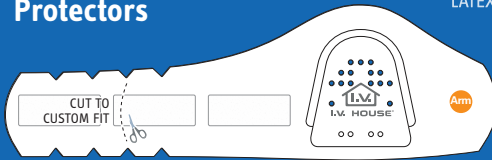


**Item 730Arm**

**Adult and Pediatric Patients:**

- Wrist, Forearm, Antecubital Space or Upper Arm




**Neonates and Infants:**

- Hand, Wrist, Forearm, Antecubital Space or Upper Arm
- Foot and Saphenous Placement

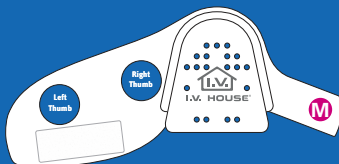

**Items 730S, 730M and 730L**

- Designed To Fit Either Hand

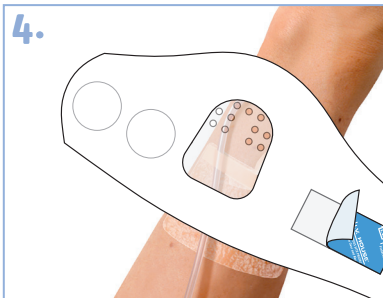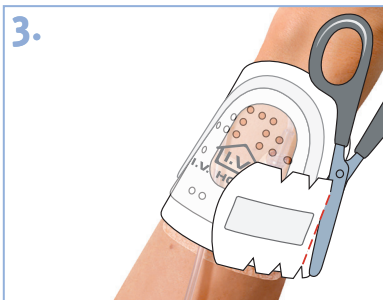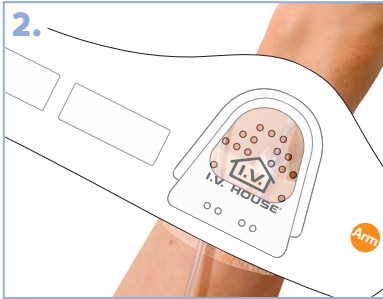

**Adult Arm Directions**

Insert the IV catheter and securely attach an IV extension set or IV tubing. Secure IV site with transparent dressing, tape, or adhesive anchor. Loop the IV tubing away from the catheter hub and toward the IV fluid source. Make sure the loop of tubing or extension set is small enough to fit entirely under the inner curve of the domed end of the I.V. House UltraDressing.

(Step-by-step directions for IV site taping are also available at [www.ivhouse.com](http://www.ivhouse.com))

Position the I.V. House UltraDressing over the looped tubing and catheter hub. To determine appropriate fit, wrap the long end of the fabric comfortably around the arm overlapping the orange label to determine how much fabric to cut off.

Cut off excess fabric at the appropriate notch. Be sure to leave 2 Velcro® loop coins for the closure on the long end of the fabric. Always cut off extra fabric.

Any extra fabric under the dome would decrease the visibility of the site and is not recommended.

Turn the device over and remove the blue release paper from the strip of soft cloth surgical tape. The purpose of this gentle tape is to keep the device from sliding down the patient's arm.

Place the I.V. House UltraDressing over the IV site. Apply the fabric around the arm, gently pressing the tape into place. Close the device with the Velcro® hooks and loops. Always allow enough stretch for two fingers to fit comfortably under the fabric.

Inspect the IV site according to nursing practice guidelines: release the closure tab under the label and lift the dome to visualize the entire IV site. After viewing the entire IV site, re-close the device.

www.ivhouse.com  
800.530.0400



Adult IVHUD Directions

800-530-0400

Ivinfo@ivhouse.com

Learn More: visit our website: [www.ivhouse.com](http://www.ivhouse.com)

Instructive Videos / Usages / Directions / Product Details and Ordering Information